


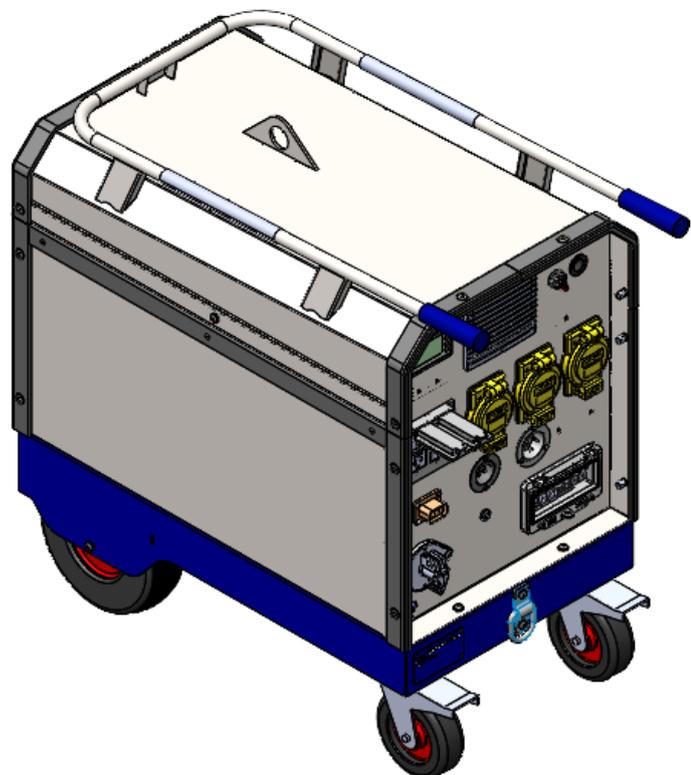

Portable Power Box

PPB-6-15-US



OPERATOR'S MANUAL

Rev 0524

Table of Contents

INTRODUCTION	3
DISCLAIMER.....	4
ABOUT THIS MANUAL.....	5
KEY TERMS.....	5
SAFETY INFORMATION	6
EMERGENCY INFORMATION.....	7
SAFETY DECALS.....	8
OVERALL MACHINE DIMENSIONS	11
OPERATING YOUR PORTABLE POWER BOX.....	12
1. CONTROL INTERFACE.....	12
2. STARTUP OPERATION.....	13
3. SHUTDOWN OPERATION.....	13
4. WHEN TRANSPORTING.....	13
5. BATTERY MONITOR.....	14
6. CHARGING THE PRODUCT.....	15
7. TRANSPORTING THE PRODUCT.....	16
MAINTENANCE.....	18
GENERAL MAINTENANCE.....	18
STORAGE.....	18
CHARGE THE BATTERY.....	18
TROUBLESHOOTING.....	19
LIMITED WARRANTY	20
WARRANTY EXCLUSIONS	21
NORMAL WEAR.....	21
INSTALLATION, USE, AND MAINTENANCE.....	21
OTHER EXCLUSIONS.....	21
OWNER'S RESPONSIBILITY UNDER LIMITED WARRANTY:.....	22
CONTACT INFORMATION	23

INTRODUCTION

Thank you for purchasing a MAKINEX product.

This manual provides information and procedures to safely operate and maintain the Portable Power Box. For your own safety and protection from injury, carefully read, understand and observe the safety instructions described in this manual.

Keep this manual or a copy of it with the machine. If you lose this manual or need an additional copy, please contact MAKINEX. This machine is designed and built with user safety in mind; however, it can present hazards if improperly operated and serviced. Please follow the operating instructions carefully. If there are any questions regarding operating or servicing of this machine, please contact MAKINEX.

The information contained in this manual was based on machines in production at the time of publication. MAKINEX reserves the right to change any portion of this information without notice.

All rights, especially copying and distribution rights are reserved.

Copyright 2024 by MAKINEX.

No part of this publication may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission from MAKINEX.

Any type of reproduction or distribution not authorised MAKINEX represents an infringement of valid copyrights and will be prosecuted. We expressly reserve the right to make technical modifications, even without due notice, which aim at improving our machines or their safety standards.

DISCLAIMER

MAKINEX and its affiliates take no responsibility for any damage, injury or death resulting from the incorrect or unsafe use of this product. Use of this product should be undertaken by competent persons only. It is the operator's responsibility to ensure that the following safety procedures are followed. If you are unsure, do not operate this product.

Record the model and serial numbers as well as date and place of purchase for future reference. Have this information available when ordering parts and when making technical or warranty enquiries.

MAKINEX SUPPORT

Refer to contact details on pg. 20

MODEL NO.

PPB-6-15-US

SERIAL NO.

DATE OF PURCHASE

PURCHASE LOCATION

ABOUT THIS MANUAL

This manual uses the following symbols to help differentiate between different kinds of information. The safety symbol is used with a key word to alert you to potential hazards in operating and owning power equipment. Follow all safety messages to avoid or reduce the risk of serious injury or death.

KEY TERMS

 READ CAREFULLY	READ CAREFULLY – refers to <i>important information</i> that should be paid careful attention.
 CAUTION	CAUTION - indicates a potential hazardous situation which, if not avoided, <i>may</i> result in minor or moderate injury
 WARNING	WARNING – indicates a potentially hazardous situation which, if not avoided, <i>could</i> result in death or serious injury
 DANGER	DANGER – indicates an imminently hazardous situation which, if not avoided, <i>will</i> result in death or serious injury
 PROHIBITED	PROHIBITED – identifies actions that <i>should never</i> be carried out by anyone interacting with the machine.

These safety warnings do not eliminate all possible hazards that could occur therefore it is essential to use common sense and to strictly follow any instructions to prevent accidents.

SAFETY INFORMATION



Read this manual **thoroughly** before operating your Portable Power Box. Failure to follow instructions could result in serious injury or death



RISK OF ELECTRICAL SHOCK

Electrical shock can cause burnt marks, cardiac arrest or even death.

- **ALWAYS** switch off the inverter and all the circuit breakers when the Portable Power Box is not in use.
- **ALWAYS** unplug all external connection cables or wires before attempting to clean the Portable Power Box.
- **ALWAYS** connect the earth wire to ground during operation.
- **ALWAYS** keep children and pets away from the Portable Power Box.
- **DO NOT** alter or disassemble the Portable Power Box.
- **DO NOT** operate the machine with missing or broken parts.
- **DO NOT** operate the product if your hands are wet.
- **DO NOT** operate the product when fatigued or under the influence of alcohol or drugs.
- In case of fire, use dry powder fire extinguishers. **DO NOT** use water fire extinguishers, which may cause electrical shock.

EMERGENCY INFORMATION

In the event of an emergency follow the steps below:

1. To disable the product, turn off the on/off switch. See picture below. This will cut off the power to the inverter immediately.



2. Further to the above, switch off all the circuit breakers (push down) and isolator. The isolator is shown below in the "ON" position. Rotate anti-clockwise 90 degrees to turn to "OFF" position.



Always ensure all safety information found in this manual, page 6, is observed.


SAFETY DECALS



LIFTING POINT



EARTH STUD

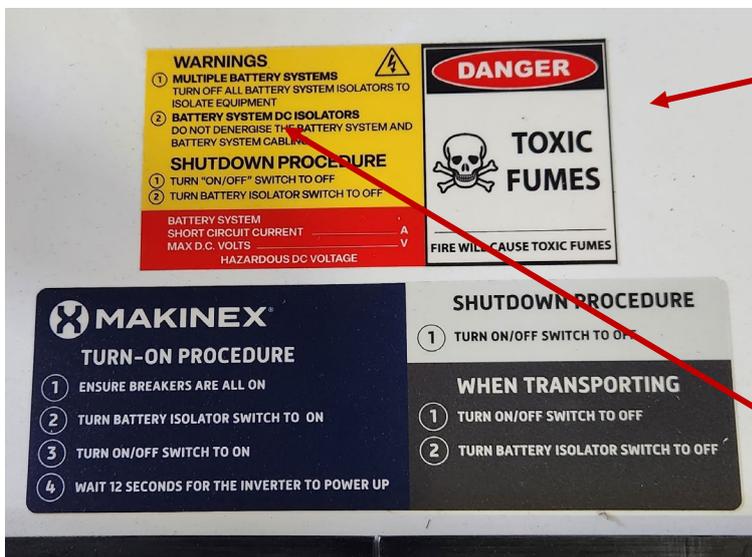

PPB-6-15-US



PPB-6
6kW | 15 kWh | 1P

2 (Qty: 3)



MAKINEX
TURN-ON PROCEDURE

- ENGINE BREAKERS ARE ALL ON
- TURN BATTERY ISOLATOR SWITCH TO ON
- TURN ON/OFF SWITCH TO ON
- WAIT 12 SECONDS FOR THE INVERTER TO POWER UP

4 (Qty: 1)

SHUTDOWN PROCEDURE

- TURN ON/OFF SWITCH TO OFF

WHEN TRANSPORTING

- TURN ON/OFF SWITCH TO OFF
- TURN BATTERY ISOLATOR SWITCH TO OFF

UNIT MUST BE TURNED ON TO CHARGE
DO NOT CHARGE FROM 120V AND 240V
AT SAME TIME

7 (Qty: 1)

PORTABLE POWER BOX

3 (Qty: 2)



WARNINGS

- MULTIPLE BATTERY SYSTEM: TURN OFF ALL BATTERY SYSTEM ISOLATORS TO ISOLATE EQUIPMENT
- BATTERY SYSTEM DO ISOLATORS: DO NOT OPEN/REMOVE THE BATTERY SYSTEM AND BATTERY SYSTEM CABLES

SHUTDOWN PROCEDURE

- TURN 'ON/OFF' SWITCH TO OFF
- TURN BATTERY ISOLATOR SWITCH TO OFF

BATTERY SYSTEM SHORT CIRCUIT CURRENT: HAZARDOUS DC VOLTAGE

5 (Qty: 1)



AC CHARGING INPUT 120V

18 (Qty: 1)

AC CHARGING INPUT 240V

12 (Qty: 1)

PV INLET

240V AC INLET

GFCI OUTLET 2

13 (Qty: 1)

GFCI OUTLET 1

AC MAIN

OFF

9 (Qty: 1)

ON

USB OUTPUT

10 (Qty: 1)

AC OUTPUTS

11 (Qty: 1)

PV CHARGING INPUT

15 (Qty: 1)

BATTERY ISOLATOR

16 (Qty: 1)

BATTERY MONITOR

8 (Qty: 1)

CB PANEL

14 (Qty: 1)

120V AC INLET RESETTABLE CB

17 (Qty: 1)



DO NOT FORK HERE

20 (Qty: 2)

PRODUCT DESCRIPTION AND SPECIFICATION

The Makinex PPB-6-10-US / PPB-6-15-US is the future of portable temporary power. They are relatively small, emit no fumes, produces little noise and are safe for indoors or confined space.



Built with safety in mind, the unit is complete with circuit breaker protection and offers the latest technology in battery storage.

Easily manoeuvrable with durable frame, weather resistant and minimal maintenance.

Designed for inductive load environments in construction, hire, commercial and film/events with products such as drop saws, cement mixers, brick saws, misting stations, coffee machines, lights & fans.

MACHINE SPECIFICATIONS	
MODEL	PPB-6-15-US
WEIGHT	488 lbs for 15 kWh
WIDTH	20.31"
HEIGHT	36.65" (including the handles)
LENGTH	39.40"
RATED POWER	6kW
OUTPUT	120V and 240V Single Phase, 6000W Pure Sine Wave
AC CHARGING	220-240V, 60Hz and 110-120V, 60 Hz
AC CHARGING TIME	15 kWh - 3 hrs from 240V AC / 9 hrs from 120V AC
PV CHARGING	Max Input Voltage 250V DC 20A
BATTERY CAPACITY	14.4kWh, 300Ah
BATTERY VOLTAGE	48V ~ 56V
WORKING ENVIRONMENT TEMPERATURE	32°F ~ 104°F
STORAGE AMBIENT TEMPERATURE	86°F

OVERALL MACHINE DIMENSIONS

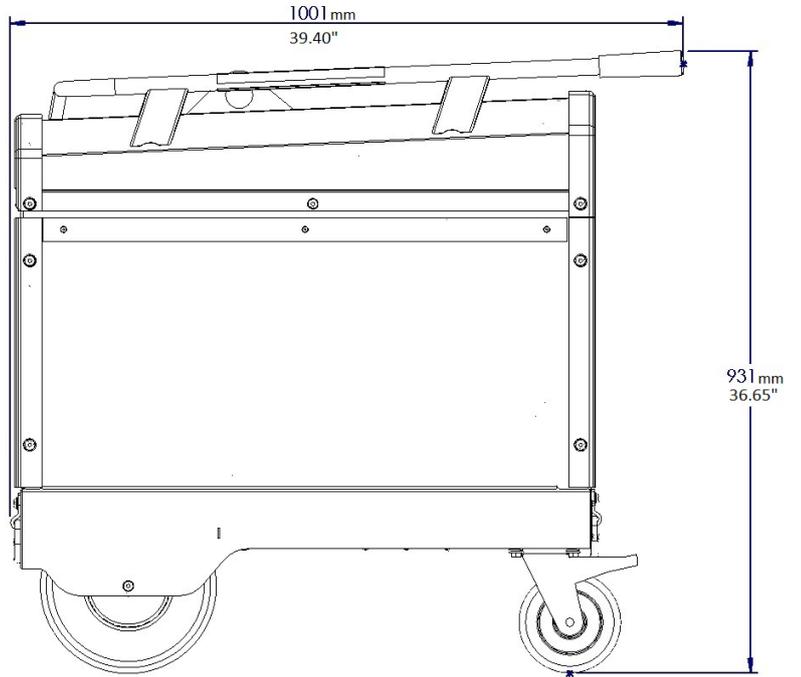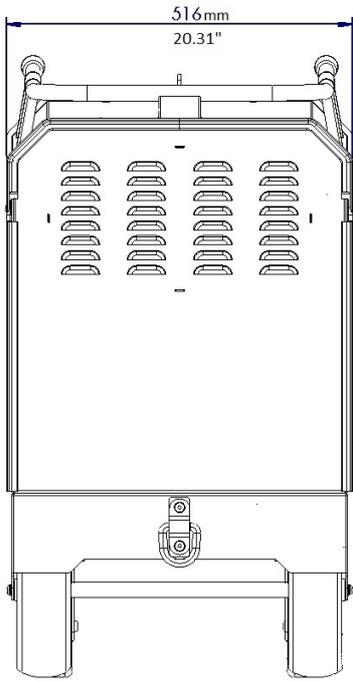

OPERATING YOUR PORTABLE POWER BOX

1. CONTROL INTERFACE

Below is the control interface of the Makinex Portable Power Box



1 – On/off switch	9 – PV Inlet socket
2 – USB outlets (type A + type C)	10 – 120V AC 20A Inlet charging socket
3 – Cooling fan	11 –240V AC 20A Inlet charging socket
4 – Battery monitor	12 – Battery DC isolator
5 – 4 x 120V AC 20A GFCI outlet sockets	13 – Resettable breaker for 120V AC Input
6 – 120V AC 30A outlet socket	14 – Circuit breakers
7 – 120/240V AC 30A outlet socket	15 – Earth stud
8 – 240V AC 30A outlet socket	

2. STARTUP OPERATION

- 2.1 Ensure all breakers (14) are switched ON.
- 2.2 Turn the “On/Off” switch (1) to the ON position.
- 2.3 Turn the “Battery Isolator”(12) switch to the ON position.
- 2.4 Wait for display to turn on and let the machine warm up for 1 minute.
- 2.5 The PPB can now be used by plugging devices into outlets 5, 6, 7, and 8.

3. SHUTDOWN OPERATION


- 3.1 Turn the “On/Off” switch (1) to the OFF position.
- 3.2 Unplug outlet sockets 5 through 8.

4. WHEN TRANSPORTING


- 4.1 Turn the “On/Off” switch (1) to OFF position.
- 4.2 Turn off all breakers (14) and switch “Battery Isolator” (12) to OFF position.

5. BATTERY MONITOR

5.1 Interface description

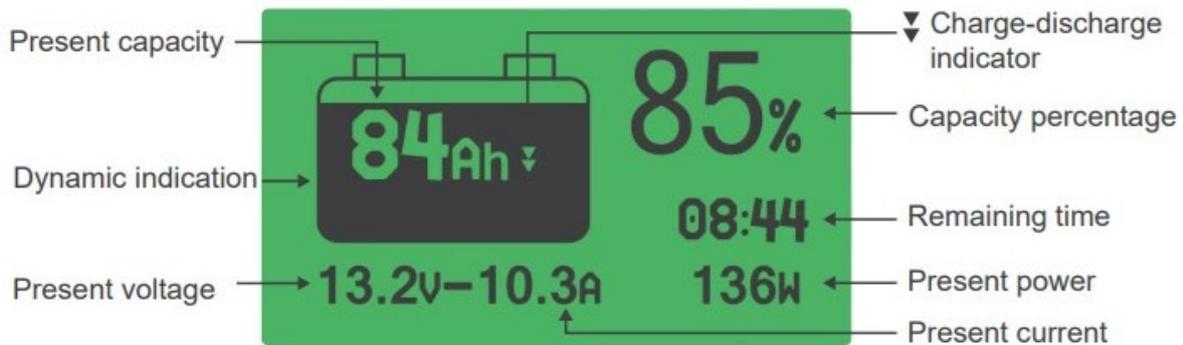

For example, the below LCD display means:

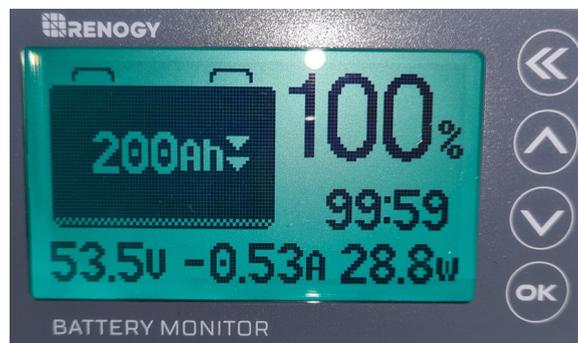

- Battery capacity is 200Ah and it is 100% charged.
- The present battery voltage is 53.5V.
- The present current is -0.53A.

Note: The “-” symbol means amp draw from batteries. In other words, batteries are powering loads connected to the Portable Power Box.

- Present power consumption is 28.8watt.
- Remaining time is 99 hours and 59 minutes.

Note: It means with the present power consumption, the battery can last for 99 hours and 59 minutes.

6. CHARGING THE PRODUCT

6.1 Turn the “Battery DC Isolator” to the ON position.

6.2 Connect the charging cable to either the 120V or 240V Inlet Socket on the Makinex Portable Power Box and the AC wall outlet.



WARNING – DO NOT attempt to charge from both 120V and 240V at the same time.

6.3 Turn on Inlet Circuit Breaker.

6.4 Turn the “On/Off” switch to the ON position.

6.5 Battery is now being charged.

The LCD display on the Battery Monitor will be blinking during charging operation.

You will also see the real time battery voltage and charging current on the LCD display.

6.6 When charging is completed, switch off the Inlet Circuit Breaker. Remove the charging cable.

7. TRANSPORTING THE PRODUCT

7.1 Lifting Point – Use the lifting eye on the top cover of the PPB to lift the unit. The label adjacent to the lifting eye indicates the total weight of the unit. Please ensure the lifting equipment used is rated for this weight.

7.2 Tie Down Points – Use the front and rear hooks and the handle tube on the top cover to tie the unit down.

7.3 Winching points – Use only the front and rear hooks to winch the unit.

7.4 Forklift – The PPB cannot be moved using a forklift except using the lifting eye with a jib/hook attachment on the tines.



WARNING – Do not lift the PPB by placing forklift tines underneath the PPB. This will damage the base.

TOP COVER HANDLE FOR TIE DOWN ONLY



**LIFTING EYE IS
FOR LIFTING
ONLY**

**HOOKS AT FRONT
AND REAR FOR
TIE DOWN AND
WINCHING**

8. PPB COVER

8.1 Install the PPB Cover when required eg. In the rain. Pull the PPB Cover out of the pouch that is attached to the PPB. When installing, ensure the clear side is on the I/O Panel side to allow access to power outlets. Once cover is over the unit, pull both zippers down all the way to ensure I/O Panel is protected.



8.2 To remove cover, unzip the cover and fold cover tightly to allow cover to fit into pouch. Place folded cover into the pouch and ensure the pouch is closed to prevent the cover from being lost or misplaced.

MAINTENANCE

GENERAL MAINTENANCE

Always keep the unit clean. Clean the unit with cloth. Please DO NOT use pressure cleaner. Avoid exposing the product to heavy rain.

The Portable Power Box's warranty does not cover items that have been subjected to operator abuse or negligence. To receive full value from the warranty, the operator must maintain the Portable Power Box as instructed in this manual including storage.

STORAGE

Store the unit in a clean, dry and cool area. Keep the unit away from children and pets. The maximum storage period at room temperature is 6 months, every 6 months the unit must be used, and recharged when necessary.

Before storing, it is recommended to charge battery to 40-70% and voltage measured to be greater than 45V.

During storage, it is required that the battery be inspected monthly, if battery voltage to drop below 45V, it must be charged according to the charging procedure mentioned in "CHARGE THE BATTERY" section.

CHARGE THE BATTERY

When charging the unit, connect a charging cable from wall socket to the charging inlet. Refer the charging specifications to "Machine Specification" section.

After storage, inspect unit and if battery voltage is above 45V, connect to wall socket and charge normally. If battery voltage is below 45V, discharge battery to the cutoff voltage, then recharge. Validate battery voltage after charging.

TROUBLESHOOTING

PROBLEM	CAUSE	REMEDY
No LCD display after DC isolator switched on for 5 minutes.	Unsuccessful system boot-up	Switch off the DC isolator and switch it back on
	Battery fault	Battery fault is rare. Access battery and further diagnose required (1)
	Loose internal wiring	The occurrence is rare. Open the unit cover and check internal wiring (1)
	Outlet circuit breakers are OFF.	Turn on the circuit breakers
	Battery is flat.	Check the battery monitor display for the battery capacity percentage. Recharge battery
	On/off switch is OFF	Turn on the On/off switch
Not able to charge the unit.	Wall socket switch is OFF.	Turn on the wall socket switch
	240V AC Inlet circuit breaker is OFF.	Turn on the circuit breakers
	120V AC inlet circuit breaker is OFF	Press to reset if tripped
	Battery DC Isolator switch is OFF	Turn on the DC Isolator switch
	On/off switch is OFF	Turn On the On/off switch
	Battery fault	Battery fault is rare. Access battery and further diagnose required (1)
Inverter Fault (alarm warning).	Inverter module malfunction	Contact Makinex
	DC voltage is too low (battery is flat).	Charge the unit
	Pre-charging unit fault (main contactor not closed)	Contact Makinex
(1) operations which must be carried out at an authorised service centre		

LIMITED WARRANTY

To take advantage of the MAKINEX limited warranty, you must have maintenance performed according to the maintenance schedule (contained in relevant owner's manual supplied with this product), by an authorised MAKINEX dealer or MAKINEX service technician. You are free to have your MAKINEX product serviced by any suitably qualified mechanic or electrician (depending on the mechanical or electrical requirement) and this will not affect your statutory warranties, however, failure by the owner to have the recommended servicing carried out by an authorised MAKINEX dealer/service technician means that you cannot take advantage of the MAKINEX limited warranty.

In order to ensure your safety, we strongly recommend that you only use an authorised MAKINEX dealer for servicing. Only authorised MAKINEX dealers have access to all the special tools, technical information, parts and training required to maintain your MAKINEX product in peak operating condition.

MAKINEX warrants each new Portable Power Box to be free from defects in material and workmanship under normal domestic and industrial use and service for the period specified below, conditional to the limitations and exclusions printed on this page. This warranty applies only to new MAKINEX products distributed by us and by our authorised MAKINEX dealers.

WARRANTY: (Ex-factory/ Reseller premise)

- 1 year warranty on the inverter and the batteries.
- 1 year warranty on the outlet panel, enclosures and wheels.

Note: Maintenance is not warranty. Excludes service and consumables required at scheduled maintenance intervals)

WARRANTY EXCLUSIONS

This warranty does not cover the following repairs and equipment:

NORMAL WEAR

This warranty does not cover repair when normal use has exhausted the life of a part or the equipment.

INSTALLATION, USE, AND MAINTENANCE

This warranty will not apply to parts and/or labour if this portable power box is deemed to have been misused, neglected, involved in an accident, abused, loaded beyond its limits, modified, installed improperly or connected incorrectly.

OTHER EXCLUSIONS

This warranty excludes:

- Cosmetic defects such as paint, decals, etc.
- Failures due to acts of God and other force majeure events beyond the manufacturer's control.
- Problems cause by parts that are not original MAKINEX parts.
- Maintenance service costs
- Freight costs

OWNER'S RESPONSIBILITY UNDER LIMITED WARRANTY:

Strict adherence to the maintenance checks and with **proof of scheduled maintenance history** is required by an authorised agent or qualified mechanic. It is the consumer's responsibility to deliver the machine in question to our service premises or to the premises of our appointed agent at the consumer's expense for repair as applicable. Maintenance services are not covered under warranty.

Claim Procedure:

- Contact MAKINEX by phone or email informing us of your machines problem or defect.
- Once the extent of the claim has been assessed, we retain the right to compensate the consumer for such defect, or repair (parts & labour), or replace the machine under warranty.
- All warranties will be carried out by MAKINEX authorised staff or appointed agents at a premise to be determined by the Manufacturer.
- Transportation charges on product submitted for repair under this warranty are the sole responsibility of the purchaser. This warranty only applies to the original purchaser and is not transferable.
- Warranty repair will only be carried out by our representatives and not via client's choice of repairer. We will not accept back charges for any work not carried out by our representatives or accept any charges due to equipment being un-operational for any reason even during its warranty period.

CONTACT INFORMATION

For sales, service, warranty, and parts for all MAKINEX products; please refer below.

	SALES, SERVICE, SPARE PARTS & WARRANTY
AUSTRALIA	<p style="text-align: center;"><u>SALES</u></p> <p style="text-align: center;">TEL 1300 795 953 or +61 2 9460 8071 WEB www.makinex.com.au</p> <p style="text-align: center;"><u>SERVICE, SPARE PARTS & WARRANTY</u></p> <p style="text-align: center;">EMAIL service@makinex.com.au</p>
USA	<p style="text-align: center;"><u>SALES</u></p> <p style="text-align: center;">TEL +1 855-625-4639 WEB www.makinex.com</p> <p style="text-align: center;"><u>SERVICE, SPARE PARTS & WARRANTY</u></p> <p style="text-align: center;">EMAIL service@makinex.com</p>

Or your nearest MAKINEX distributor

We have very knowledgeable, experienced staff to assist you with help and advice.



PRODUCT RISK / HAZARD ASSESSMENT TABLE

Product Name: Portable Power Box Gen 4 (AU Units x11/USA units x11)	Assessment By: Andrew Reade/Hayden Ellis/Mike Stanford
Manufacturer: MAKINEX PTY LTD	Document Revision Number: 2
Operator Competency: PLANT LICENSE NOT REQUIRED	08-Nov-23

HAZARD	LIKELIHOOD			CONSEQUENCE			RISK		CONTROL ACTION
	3	UNLIKELY	4	3	MINOR	4	MEDIUM	5	
CRUSHING DUE TO - PRODUCT FALLING OVER	3	UNLIKELY	3	MINOR	4	MEDIUM			ENSURE UNIT IS USED ON FLAT, LEVEL SURFACE AND BRAKES ARE ENGAGED
WHEEL RUNNING OVER LIMB	3	UNLIKELY	4	NEGLECTIBLE	5	LOW			ENSURE APPROPRIATE SAFETY APPAREL IS WORN
SHEARING INJURY DUE TO - DROPPED DURING LIFTING	3	UNLIKELY	2	MAJOR	3	MEDIUM			FREQUENT INSPECTION OF LIFTING EYE AND PROPER LIFTING EQUIPMENT AND TECHNIQUE
ENTANGLEMENT DUE TO - ELECTRICAL LEADS	3	UNLIKELY	3	MINOR	4	MEDIUM			SITE SAFETY OFFICER TO INSPECT PLACEMENT OF LEADS
STRIKING DUE TO - PRODUCT ROLLING ON SLOPE / WIND	3	UNLIKELY	2	MAJOR	3	MEDIUM			ENSURE CASTOR WHEEL PARK BRAKES ARE ACTIVATED
PRODUCT NOT SECURED IN VEHICLE DURING TRANSPORT	3	UNLIKELY	2	MAJOR	3	MEDIUM			ENSURE PRODUCT IS PROPERLY SECURED IN VEHICLE WITH TIE-DOWN STRAPS/SIROPES ETC.
DROPPED DURING LIFTING	3	UNLIKELY	2	MAJOR	3	MEDIUM			FREQUENT INSPECTION OF LIFTING EYE AND PROPER LIFTING EQUIPMENT AND TECHNIQUE
ABRASION DUE TO - LIMB TRAPPED BETWEEN MOVING PRODUCT AND FIXED OBJECT	3	UNLIKELY	3	MINOR	4	MEDIUM			ROUTINE MANAGEMENT OF PROPER USE ENSURE UNIT IS USED ON FLAT, LEVEL SURFACE AND CASTOR WHEEL PARK BRAKES ARE ENGAGED. ENSURE PRODUCT IS PROPERLY SECURED DURING TRANSPORT. ENSURE CASTOR WHEEL PARK BRAKES ARE FUNCTIONING PROPERLY
PINCH HANDS OR FINGERS CAUGHT IN LIFTING EYE WHEN ATTACHING HOOK	3	UNLIKELY	4	NEGLECTIBLE	5	LOW			FREQUENT INSPECTION OF HOOK ATTACHMENT TECHNIQUE AND USE OF SAFETY GEAR
SKIN OR LIMB CAUGHT IN BETWEEN PRODUCT AND FIXED OBJECT	3	UNLIKELY	4	NEGLECTIBLE	5	LOW			ENSURE UNIT IS USED ON FLAT, LEVEL SURFACE AND PARK BRAKE IS ENGAGED. ENSURE PRODUCT IS PROPERLY SECURED DURING TRANSPORT
SLIP/ TRIP/FALL DUE TO - ELECTRICAL LEADS	2	LIKELY	3	MINOR	3	MEDIUM			SITE SAFETY OFFICER TO INSPECT PLACEMENT OF LEADS
ELECTROCUTION DUE TO - WET OUTLET SOCKETS	3	UNLIKELY	2	MAJOR	3	MEDIUM			FREQUENT INSPECTION OF ALL ELECTRICAL EQUIPMENT INCLUDING MAINS POWER LEADS WITH ALL EQUIPMENT TESTED AND TAGGED. PRODUCT MUST ALWAYS BE EARTHED
EXPOSED / DAMAGED LEADS	3	UNLIKELY	2	MAJOR	3	MEDIUM			FREQUENT INSPECTION OF ALL ELECTRICAL EQUIPMENT INCLUDING MAINS POWER LEADS WITH ALL EQUIPMENT TESTED AND TAGGED. PRODUCT MUST ALWAYS BE EARTHED

NOTES

THIS ITEM OF PLANT IS DESIGNED AND MANUFACTURED AS A CHARGING DEVICE FOR TESTED AND TAGGED EQUIPMENT ONLY. THE PLANT IS NOT DESIGNED FOR, OR TO BE USED AS A DEVICE FOR POWERING EXTERNAL EQUIPMENT OR PLUGGING EXTENSION LEADS.

THIS DOCUMENT HAS BEEN PREPARED ACCORDING TO GUIDELINES AND RECOMMENDATIONS FOUND IN:
 1. 'HAZPAK' PRODUCED BY THE WORK-COVER AUTHORITY AND
 2. THE AUSTRALIAN STANDARDS 4024.1.4/5 - 1996 "SAFEGUARDING OF MACHINERY - PART 1: GENERAL PRINCIPLES"

THE TERMS 'VERY LIKELY', 'LIKELY', 'UNLIKELY', 'VERY UNLIKELY' REFER TO PROBABILITY OF AN EVENT HAPPENING, BUT ARE QUALITATIVE AND BASED ON BEST ESTIMATION DUE TO CONSULTATION AND EXPERIENCE. RISK LEVEL IS DETERMINED USING THE 'RISK TABLE' AS SUGGESTED IN 'HAZPAK'. INHERENTLY, AS THE CONSEQUENCE INCREASES IN SEVERITY, RISK INCREASES - EVEN WHEN LIKELIHOOD IS LOW

CONSEQUENCE TERMINOLOGY IS DEFINED BY THE WORK-COVER AUTHORITY AS THUS:
 NEGLECTIBLE = ABLE TO BE TREATED USING FIRST AID
 MINOR = REVERSIBLE INJURIES REQUIRING SEVERAL DAYS OFF
 MAJOR = NORMALLY IRREVERSIBLE INJURIES
 FATALITY

MAKINEX PTY LTD
 PH: (02) 1300795953

